


# STANDARD RAILGUARD INSTALLATION DETAILS

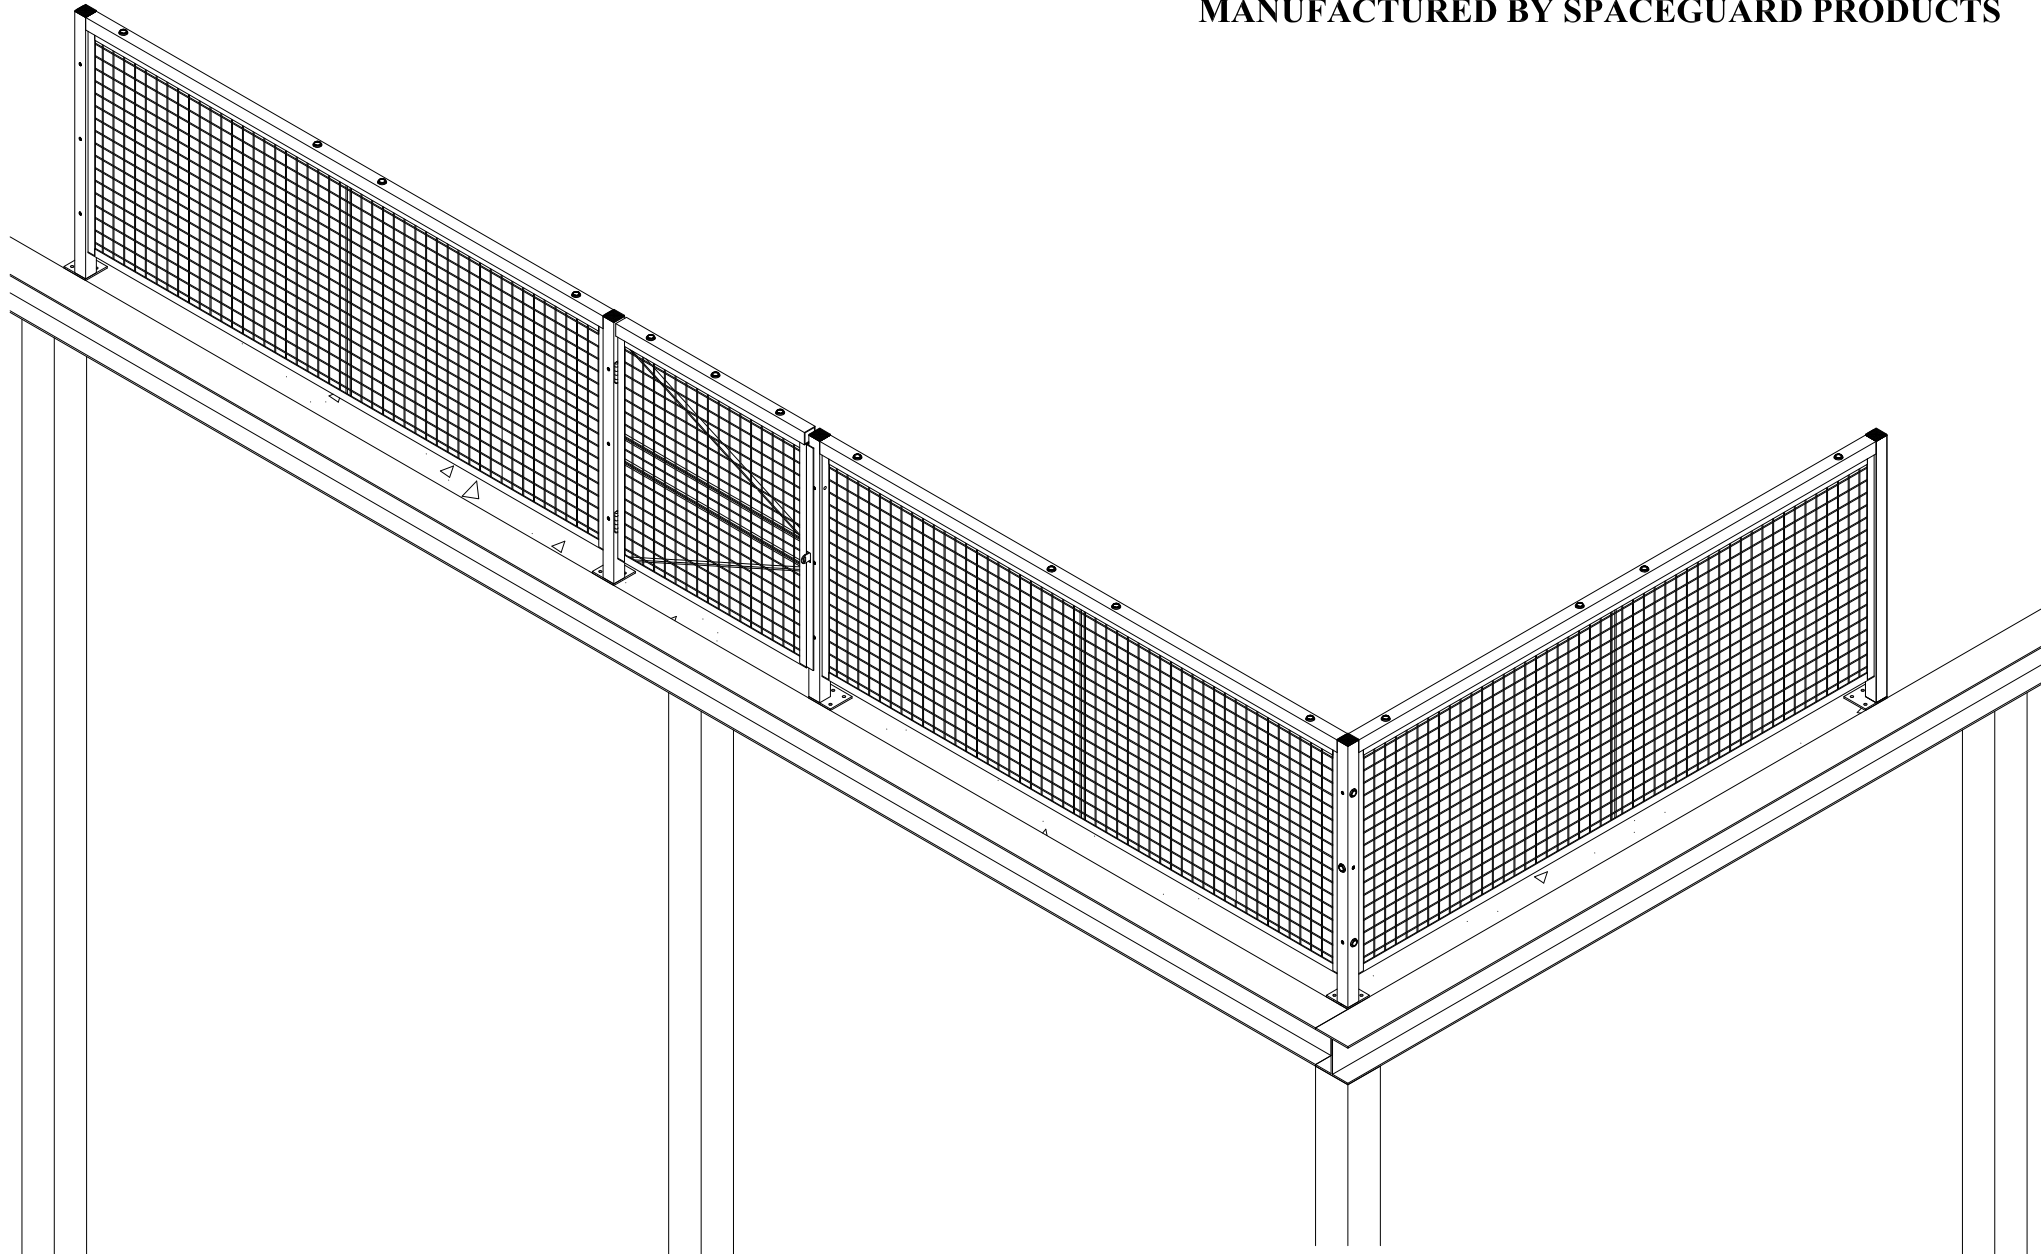

MANUFACTURED BY SPACEGUARD PRODUCTS



# GETTING STARTED WITH YOUR BEASTWIRE MESH RAILGUARD

## BEFORE YOU BEGIN INSTALLATION YOU MUST:

- **IDENTIFY** this label... contains packing slip
- **INSPECT** for damages before taking delivery
- **INVENTORY** for shortages
- **CONTACT** manufacturer immediately if damages or shortages are present



## RECOMMENDED TOOLS:

- Crowbar, tin snips & utility knife
- Tape measure, level, & chalk line
- Ladder(s) (&/or Lift) & extension cords
- Locking C-clamps & pliers
- Saw w/ blade for cutting metal
- Impact driver w/ SAE deep well sockets
- Hammer drill w/ several new bits, appropriate for flooring
- Screwdriver set
- Wrench set
- Rubber mallet

## RECOMMENDED MATERIALS (not supplied):

- Correct method of anchoring posts based on platform type; holes in base plates are 7/16" (enough for 2-3 per post)
- Washers or other materials suitable for leveling guarding
- Steel angle for bracing and filling gaps at walls
- Engineered fall protections system to be used at any gate

## UNLEASHING BEASTWIRE:

BeastWire Mesh Railguard is designed to use standard components to make materials more affordable, available, and easier to install. Our system uses all through, carriage bolt connections with hardware on the secure side of the enclosure. Main features:

- **UNIVERSAL POST:** the same post is used for all standard, in-line, door, corner, and 3 & 4-way connections
- **INTRODUCING THE GROWTH PLATE :** 2" roll formed channel stacked two-high below panels and gates to obtain required clearance or act as 4" Kick Plate
- **FLEXIBLE HINGE DOORS:** our single and double hinge doors swing in or out; single doors can hinge from the left or right and come standard with padlock hasps but can be modified to work with an interlock system

## HELPFUL HINTS:

- **AVOID** storing materials outside or exposed to moisture
- **REMEASURE** the space before building your guarding
- **PLAN** whether you want the mesh looking away from or towards your platform before installing the panels and door(s)
- **ANCHOR** only after ensuring the system is plumb and level
- **HANG** your door(s) and locking mechanisms
- **PLUG** all remaining holes in posts with black dome plugs provided
- **TOUCH UP** using factory supplied paint; follow directions on can
- **ADMIRE** your work and the fact you purchased a quality product

## BeastWire Mesh Railguard

Manufactured by SpaceGuard Products

Call (800) 841-0680, Mon-Fri 8am-5pm ET

[www.BeastWireMesh.com](http://www.BeastWireMesh.com)

Page 2

Standard Installation Details

Updated 10/28/2016

# INDEX

HARDWARE .....	4
BOLT-ON KICK PLATES .....	5
PANEL/RAIL CONNECTIONS .....	6
SINGLE DOOR CONNECTIONS.....	7
DOUBLE DOOR CONNECTIONS .....	9
FINISHED CONNECTIONS.....	11

## **BeastWire Mesh Railguard**












Manufactured by SpaceGuard Products  
Call (800) 841-0680, Mon-Fri 8am-5pm ET

[www.BeastWireMesh.com](http://www.BeastWireMesh.com)

**Page 3**

Standard Installation Details  
Updated 11/10/2016

# HARDWARE

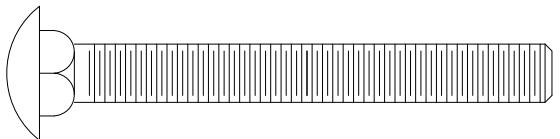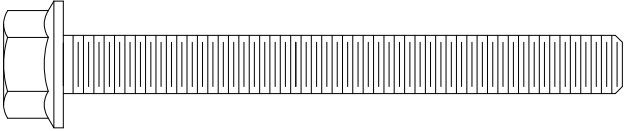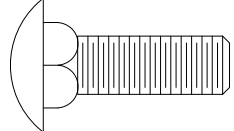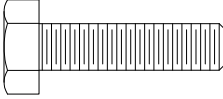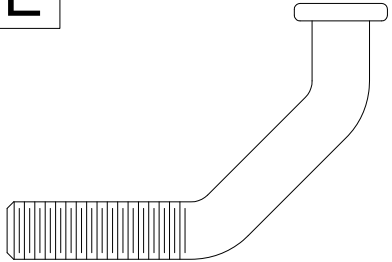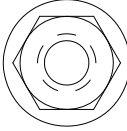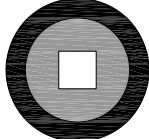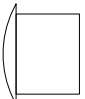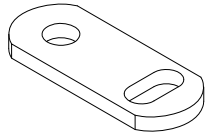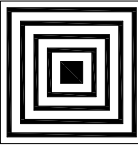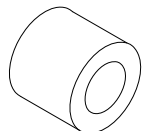
<b>A</b>  Carriage Bolt 5/16" X 2-3/4"	<b>B</b>  Flanged Hex Head Bolt 5/16" X 3"	<b>C</b>  Carriage Bolt 5/16" X 1"	
<b>D</b>  Hex Head Bolt 5/16" X 1"	<b>E</b>  5/16" Angle Bolt	<b>F</b>  Flanged Hex Nut 5/16"	<b>G</b> (Not to scale)  5/16" Carriage Adaptor
<b>H</b>  5/16" Dome Plug	<b>I</b> (Not to scale)  Padlock Lug	<b>J</b> (Not to scale)  2" Post Cap	<b>K</b> (Not to scale)  Nylon Spacer

## BeastWire Mesh Railguard

Manufactured by SpaceGuard Products  
Call (800) 841-0680, Mon-Fri 8am-5pm ET

[www.BeastWireMesh.com](http://www.BeastWireMesh.com)

# BOLT-ON KICK PLATES

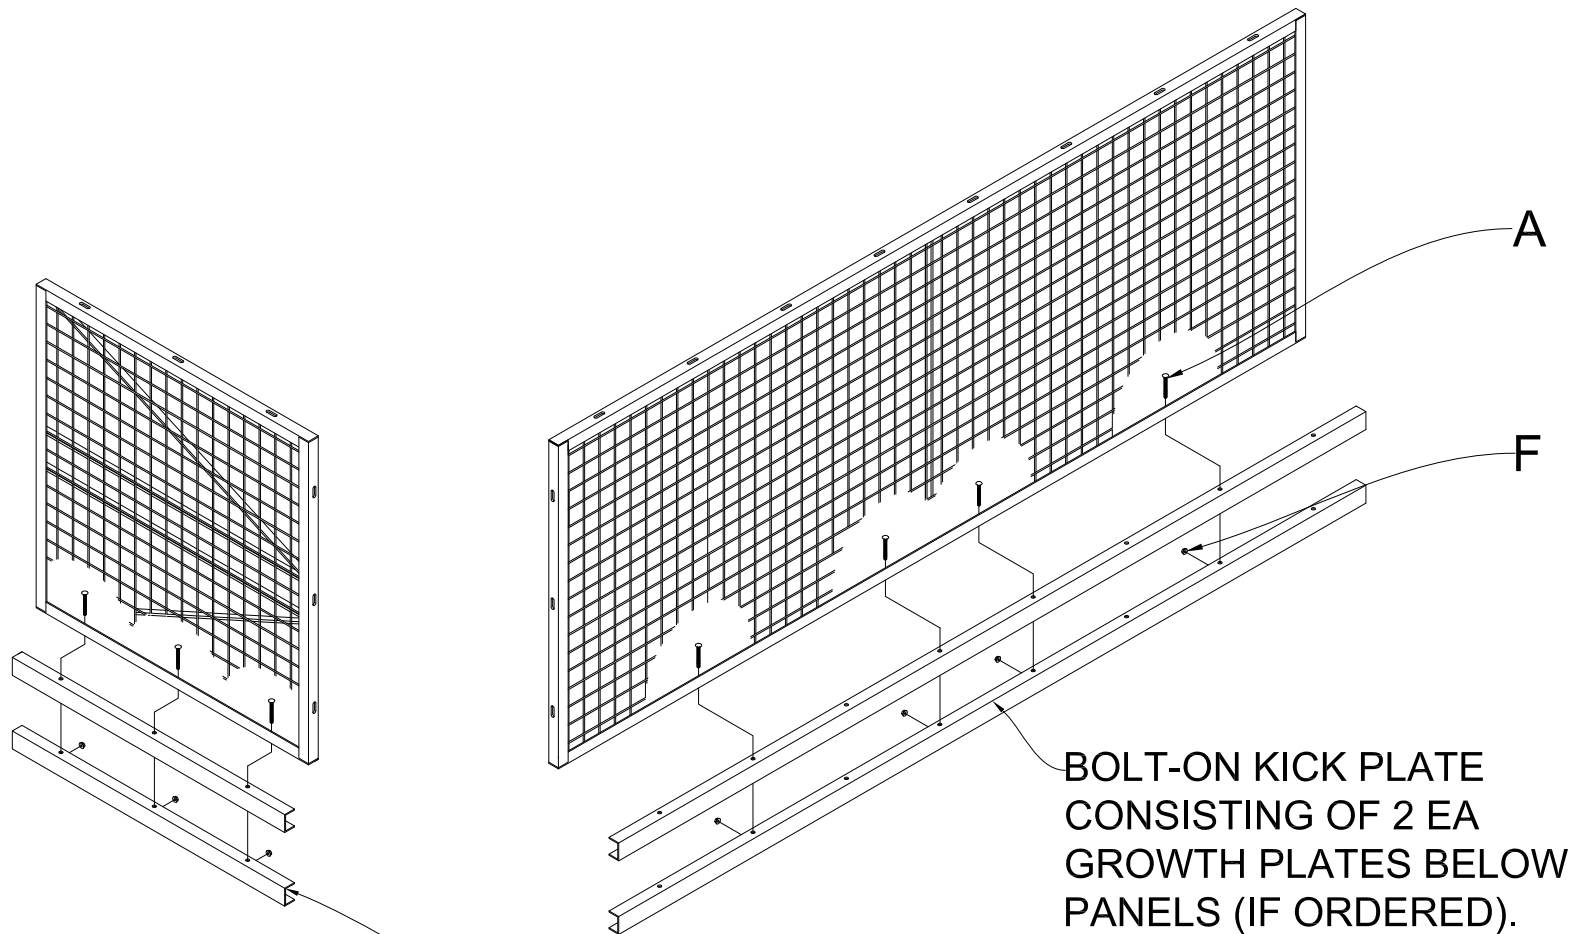

## BeastWire Mesh Railguard


Manufactured by SpaceGuard Products  
Call (800) 841-0680, Mon-Fri 8am-5pm ET

GROWTH PLATE  
@ BOTTOM ARE OPTIONAL  
ADDERS FOR DOORS.

BOLT-ON KICK PLATE  
CONSISTING OF 2 EA  
GROWTH PLATES BELOW  
PANELS (IF ORDERED).

[www.BeastWireMesh.com](http://www.BeastWireMesh.com)

# PANEL/RAIL CONNECTIONS

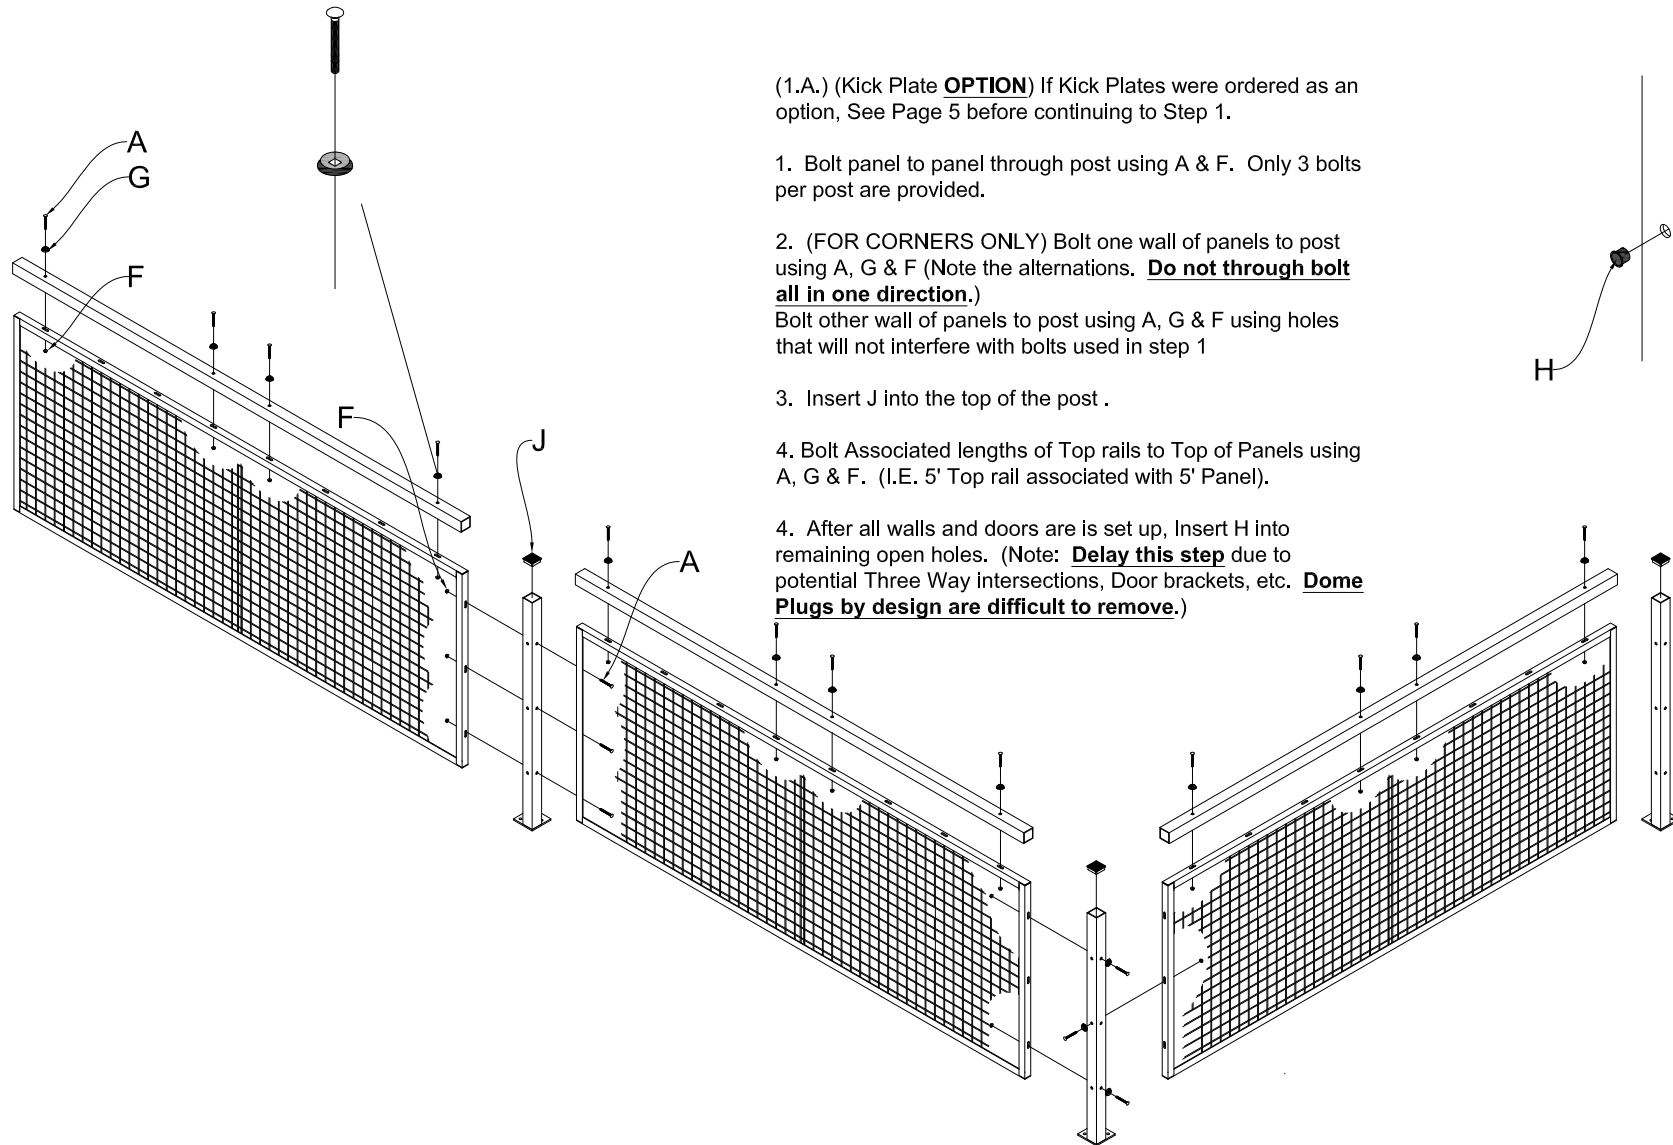

(1.A.) (Kick Plate **OPTION**) If Kick Plates were ordered as an option, See Page 5 before continuing to Step 1.

1. Bolt panel to panel through post using A & F. Only 3 bolts per post are provided.

2. (FOR CORNERS ONLY) Bolt one wall of panels to post using A, G & F (Note the alternations. **Do not through bolt all in one direction.**)

Bolt other wall of panels to post using A, G & F using holes that will not interfere with bolts used in step 1

3. Insert J into the top of the post .

4. Bolt Associated lengths of Top rails to Top of Panels using A, G & F. (I.E. 5' Top rail associated with 5' Panel).

4. After all walls and doors are is set up, Insert H into remaining open holes. (Note: **Delay this step** due to potential Three Way intersections, Door brackets, etc. **Dome Plugs by design are difficult to remove.**)

## BeastWire Mesh Railguard

Manufactured by SpaceGuard Products

Call (800) 841-0680, Mon-Fri 8am-5pm ET

[www.BeastWireMesh.com](http://www.BeastWireMesh.com)


Page 6

Standard Installation Details

Updated 11/10/2016

# SINGLE DOOR CONNECTIONS

## OUTSWING

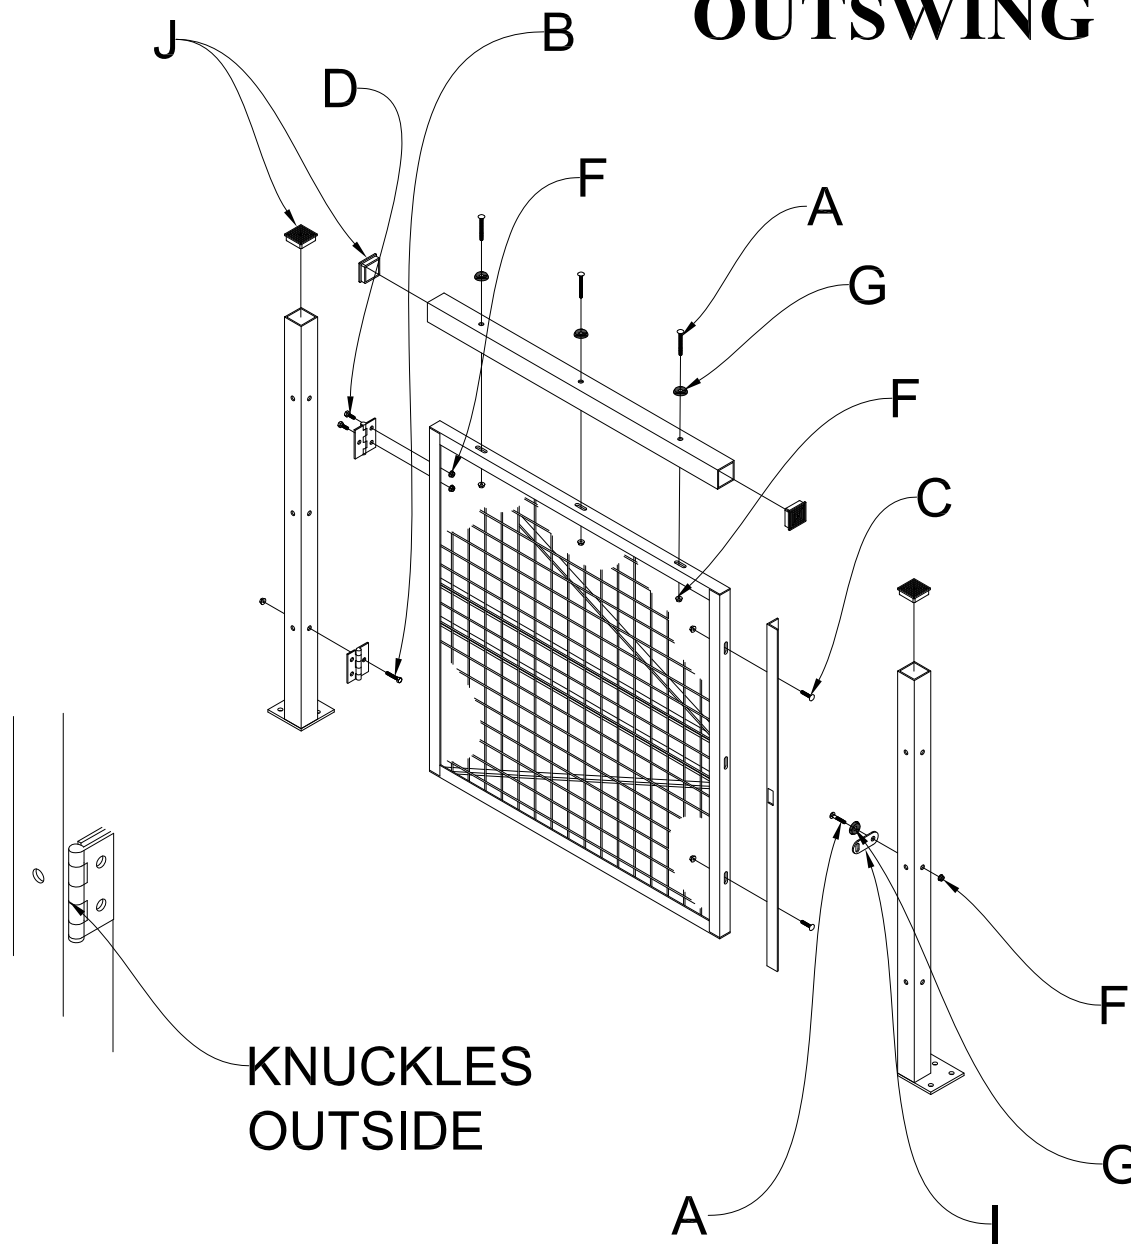

1. Determine door swing. (Left or Right)

(1.A.) (KICK PLATE **OPTION**) If growth plate(s) were ordered as an option, See Page 5 before continuing to Step 2.

2. Bolt Hinges to post using B & F, hinge knuckles to outside. Angle Bolts (E) provided where through bolting not possible.

3. Bolt Slam angle to Door using C & F. Bolt Lug (I) to Post using A, G & F. Angle Bolts (E) provided where through bolting not possible.

4. Bolt Top rail to door using A, G, & F.

5. Bolt Door to Hinges using D & F.

6. Insert J into all exposed tube ends (Post, Top rail).

**BeastWire Mesh Railguard**

Manufactured by SpaceGuard Products

Call (800) 841-0680, Mon-Fri 8am-5pm ET

[www.BeastWireMesh.com](http://www.BeastWireMesh.com)


**Page 7**

Standard Installation Details

Updated 11/10/2016

# SINGLE DOOR CONNECTIONS

## IN SWING

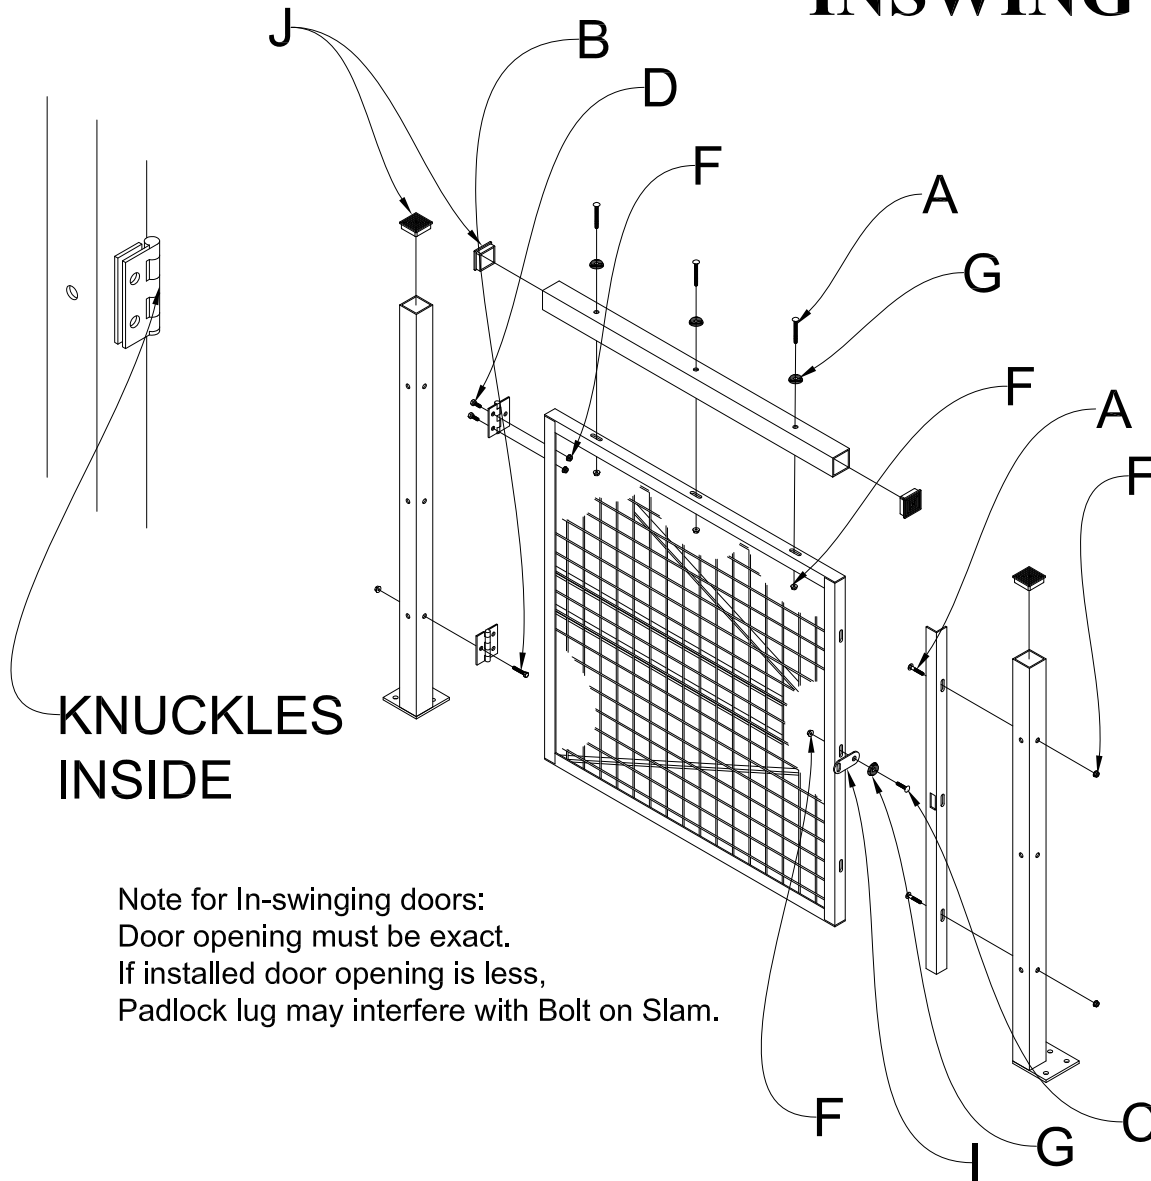

**NUCKLES  
INSIDE**

Note for In-swinging doors:  
Door opening must be exact.  
If installed door opening is less,  
Padlock lug may interfere with Bolt on Slam.

1. Determine door swing. (Left or Right)

(1.A.) (KICK PLATE **OPTION**) If growth plate(s) were ordered as an option, See Page 5 before continuing to Step 2.

2. Bolt Hinges to post using B & F, hinge knuckles to inside. Angle Bolts (E) provided where through bolting not possible.

3. Bolt Slam angle to Post using A & F. Angle Bolts (E) provided where through bolting not possible. Bolt Lug (I) to Door using C, G & F.

4. Bolt Top rail to door using A, G, & F.

5. Bolt Door to Hinges using D & F.

6. Insert J into all exposed tube ends (Post, Top rail).

### BeastWire Mesh Railguard

Manufactured by SpaceGuard Products

Call (800) 841-0680, Mon-Fri 8am-5pm ET

[www.BeastWireMesh.com](http://www.BeastWireMesh.com)

**Page 8**

Standard Installation Details

Updated 11/10/2016



# DOUBLE DOOR CONNECTIONS

## OUTSWING

(1.A.) (KICK PLATE **OPTION**) If growth plate(s) were ordered as an option, See Page 5 before continuing to Step 2.

1. Bolt Hinges to both Posts (knuckles to outside) using B & F. Angle Bolts (E) provided where through bolting not possible


2. Bolt Slam angle to left door half using C & F.

3. Bolt Padlock Lug (I) to right door half using C, G, K (acting spacer), & F.

4. Bolt doors to Hinges using D & F.

5. Bolt Top rails to doors using A, G, & F.

6. Insert J into all exposed tube ends (Post, Top rail).

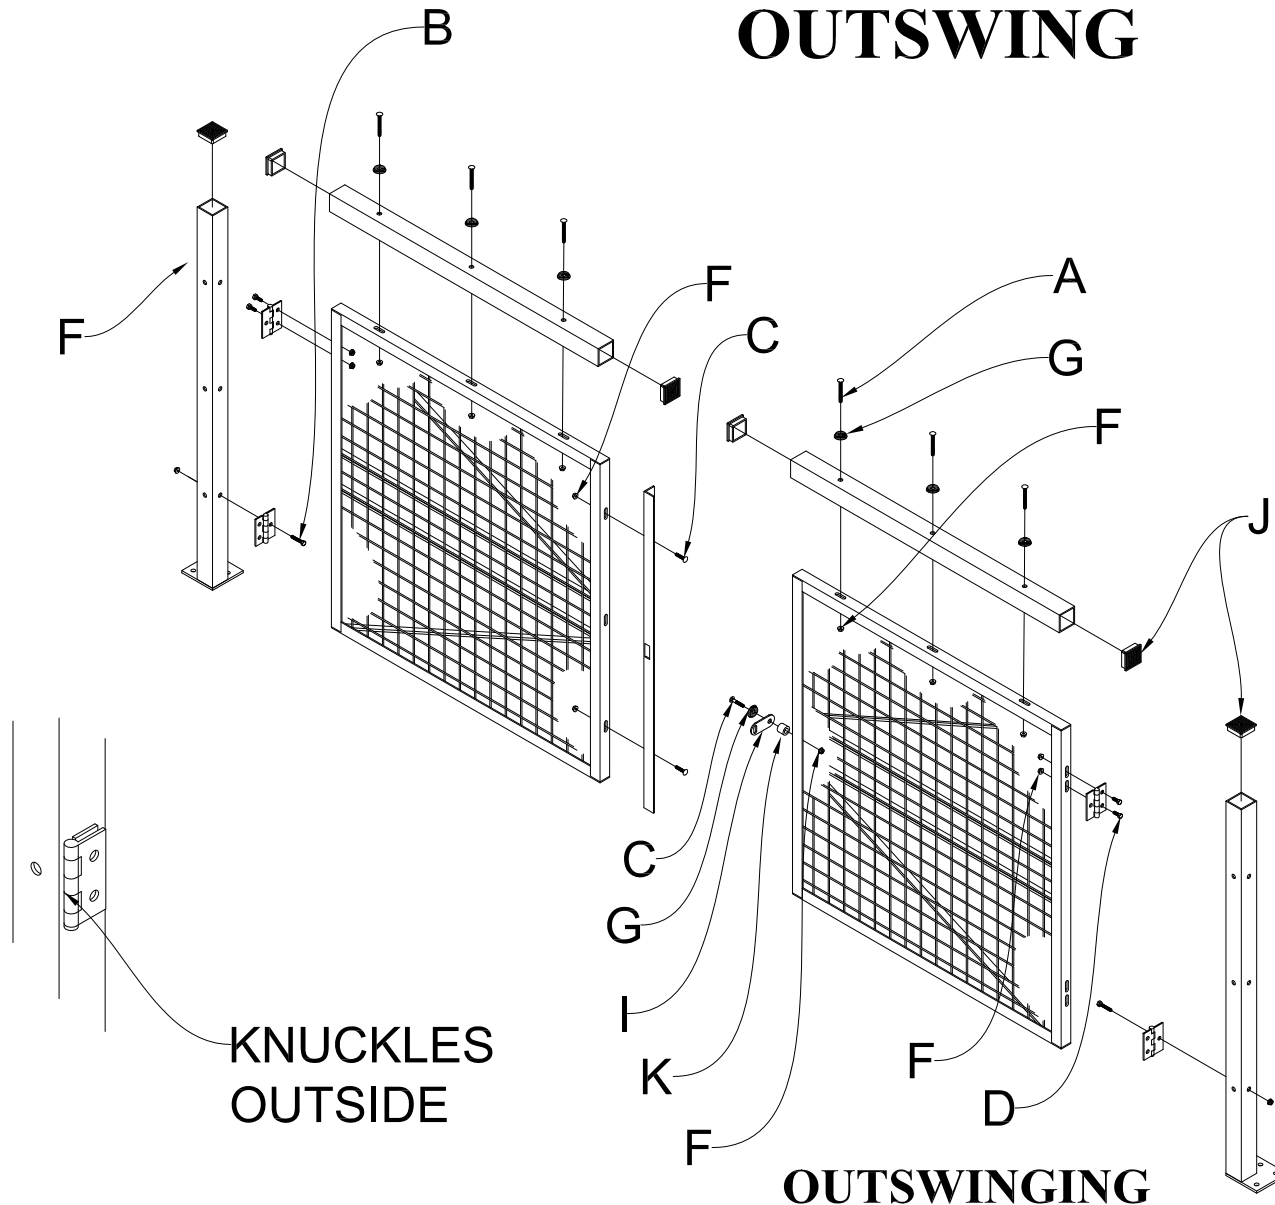

### BeastWire Mesh Railguard

Manufactured by SpaceGuard Products

Call (800) 841-0680, Mon-Fri 8am-5pm ET

[www.BeastWireMesh.com](http://www.BeastWireMesh.com)


Page 9

Standard Installation Details

Updated 11/10/2016

# DOUBLE DOOR CONNECTIONS

## IN SWING

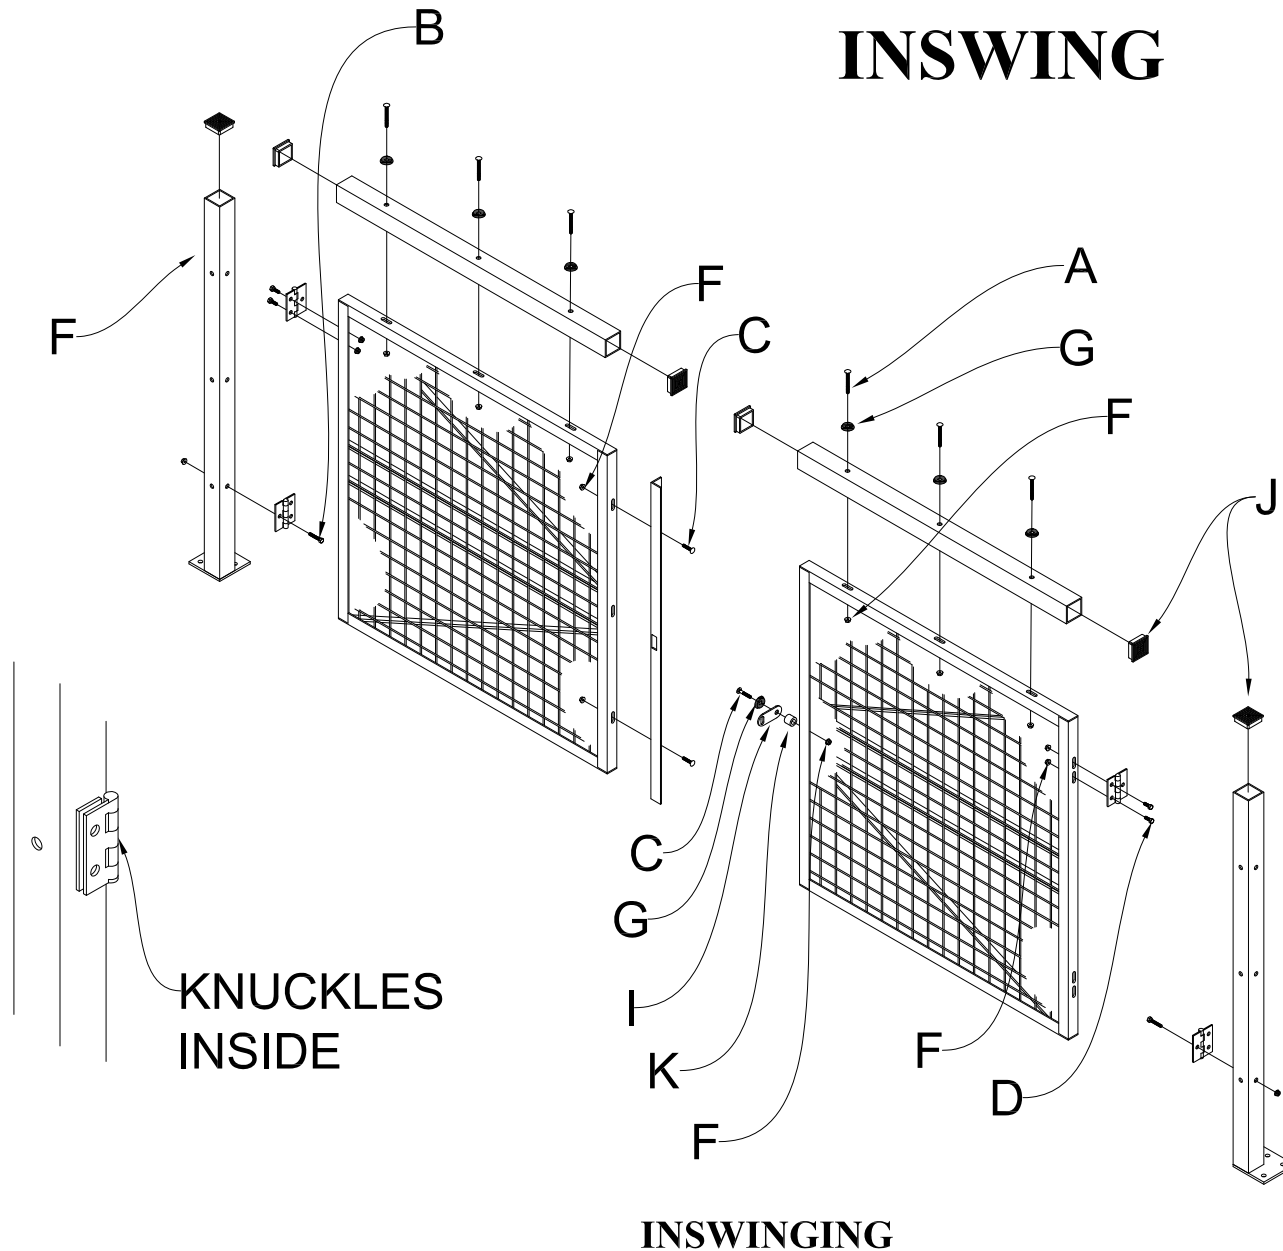

(1.A.) (KICK PLATE **OPTION**) If growth plate(s) were ordered as an option, See Page 5 before continuing to Step 2.

1. Bolt Hinges to both Posts (knuckles to inside) using B & F. Angle Bolts (E) provided where through bolting not possible
2. Bolt Slam angle to left door half using C & F.
3. Bolt Padlock Lug (I) to right door half using C, G, K (acting spacer), & F.
4. Bolt doors to Hinges using D & F.
5. Bolt Top rails to doors using A, G, & F.
6. Insert J into all exposed tube ends (Post, Top rail).


**BeastWire Mesh Railguard**  
 Manufactured by SpaceGuard Products  
 Call (800) 841-0680, Mon-Fri 8am-5pm ET

[www.BeastWireMesh.com](http://www.BeastWireMesh.com)


**Page 10**  
 Standard Installation Details  
 Updated 11/10/2016

# FINISHED PANEL CONNECTIONS

PANEL  
CONNECTIONS  
(WITH KICK  
PLATE)

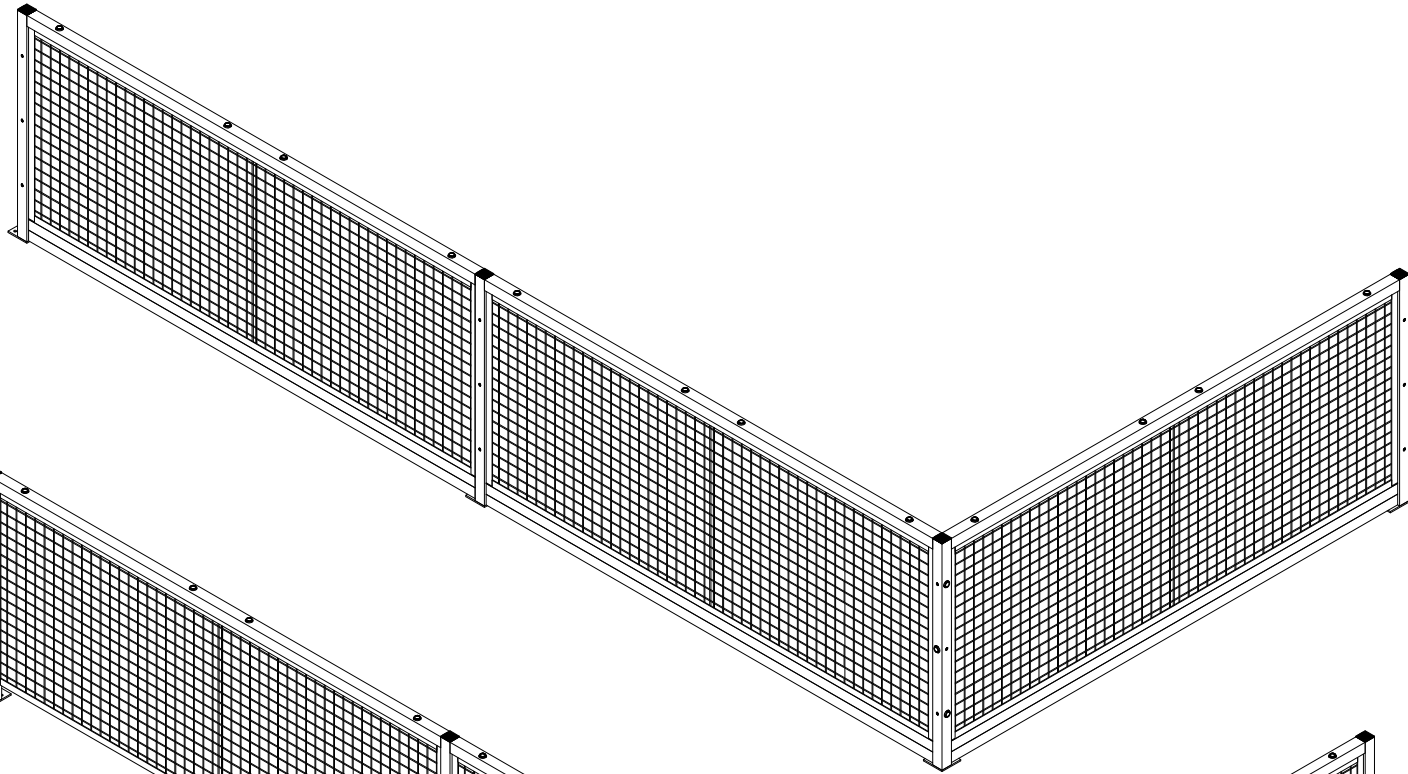

PANEL  
CONNECTIONS  
(NO KICK PLATE)

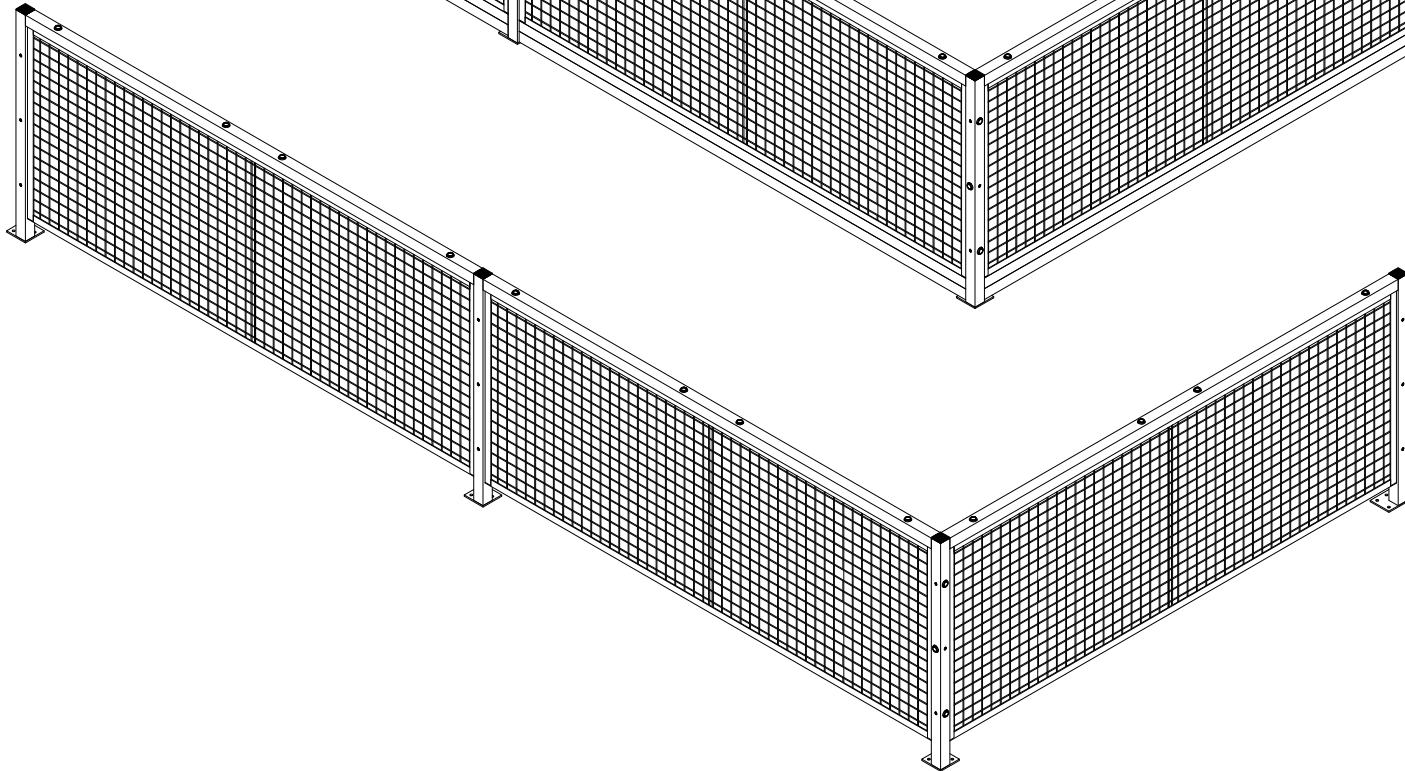

## BeastWire Mesh Railguard


Manufactured by SpaceGuard Products

Call (800) 841-0680, Mon-Fri 8am-5pm ET


[www.BeastWireMesh.com](http://www.BeastWireMesh.com)

# FINISHED SINGLE DOOR CONNECTIONS


**OUTSWINGING  
(NO KICK PLATE)**

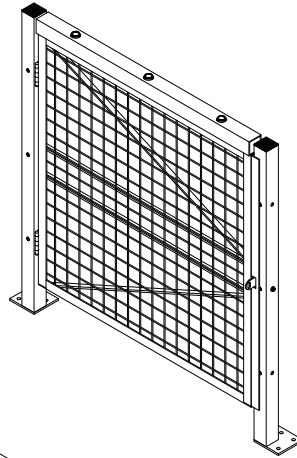


**OUTSWINGING  
(WITH KICK  
PLATE)**

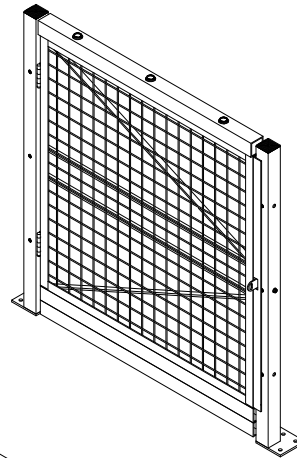

**INSWINGING  
(NO KICK PLATE)**

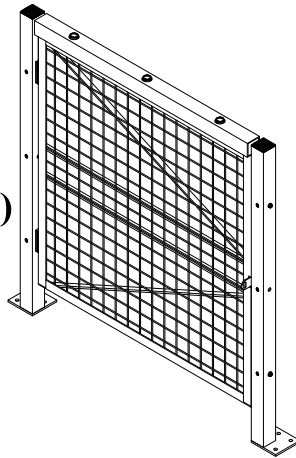

**INSWINGING  
(WITH KICK  
PLATE)**

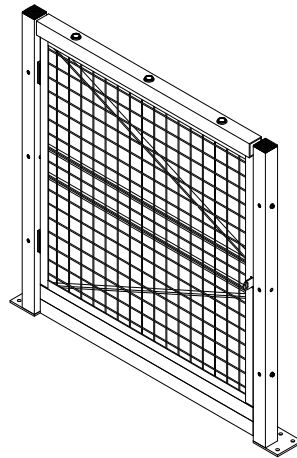

**BeastWire Mesh Railguard**

Manufactured by SpaceGuard Products

Call (800) 841-0680, Mon-Fri 8am-5pm ET


[www.BeastWireMesh.com](http://www.BeastWireMesh.com)

**Page 12**

Standard Installation Details

Updated 11/10/2016

# FINISHED DOUBLE DOOR CONNECTIONS

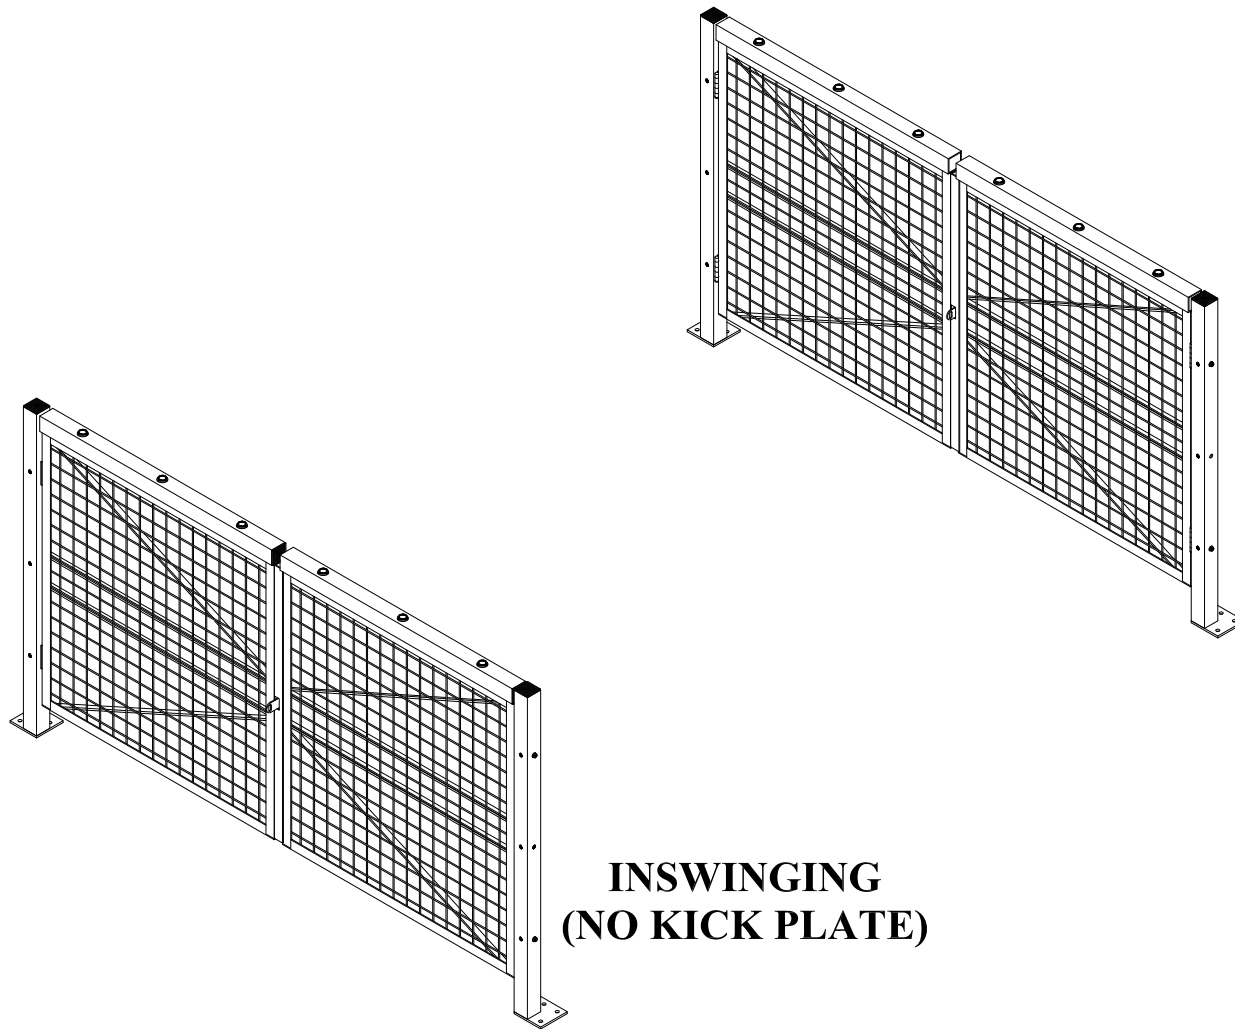

**OUTSWINGING  
(NO KICK PLATE)**


**INSWINGING  
(NO KICK PLATE)**

## **BeastWire Mesh Railguard**

Manufactured by SpaceGuard Products  
Call (800) 841-0680, Mon-Fri 8am-5pm ET

[www.BeastWireMesh.com](http://www.BeastWireMesh.com)

# FINISHED DOUBLE DOOR CONNECTIONS

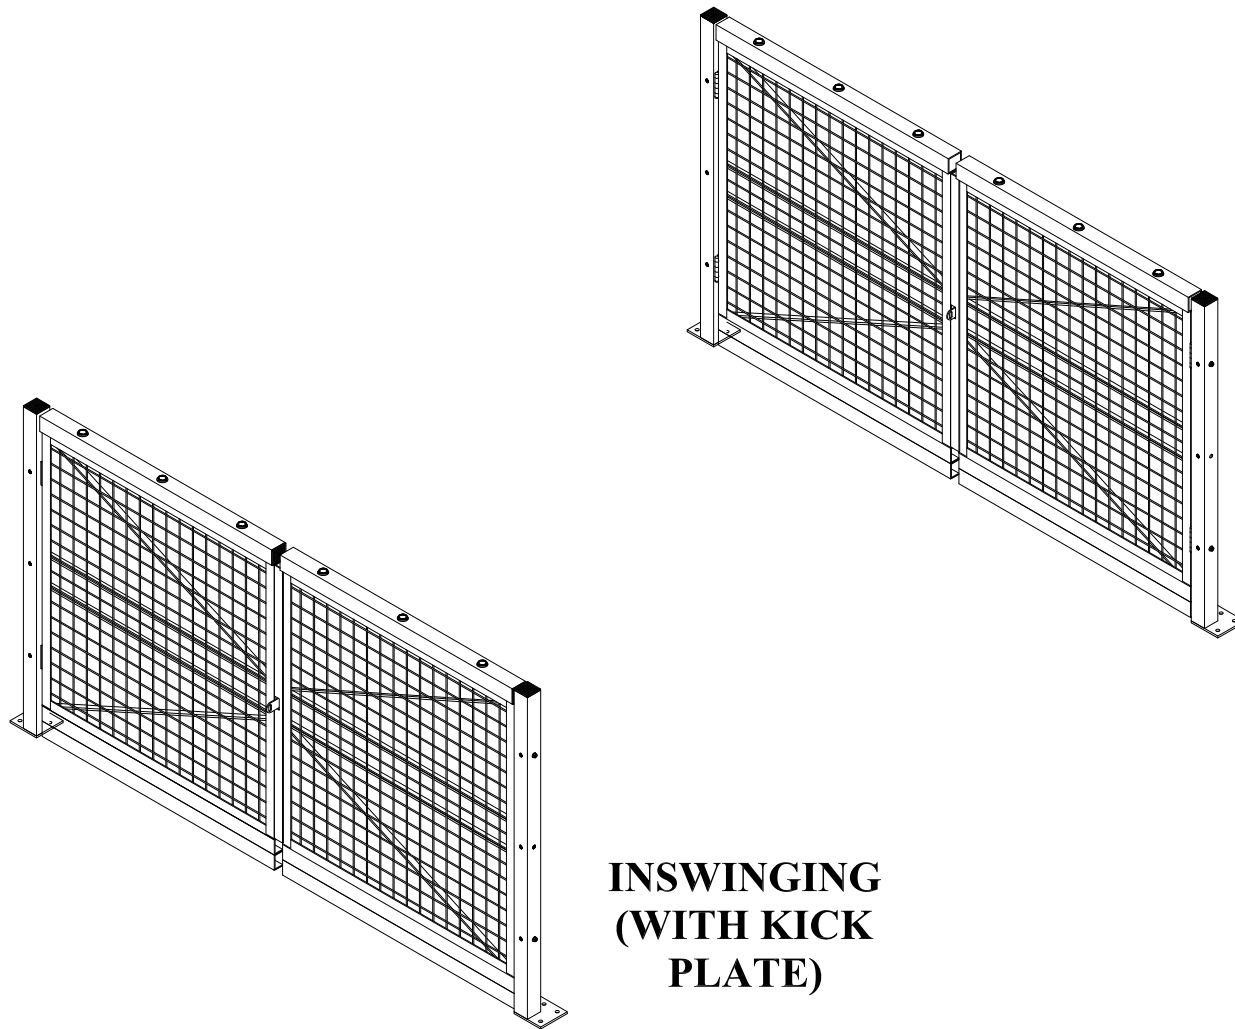

**OUTSWINGING  
(WITH KICK  
PLATE)**

**INSWINGING  
(WITH KICK  
PLATE)**

## **BeastWire Mesh Railguard**

Manufactured by SpaceGuard Products  
Call (800) 841-0680, Mon-Fri 8am-5pm ET

[www.BeastWireMesh.com](http://www.BeastWireMesh.com)