


RACK DOOR INSTALLATION

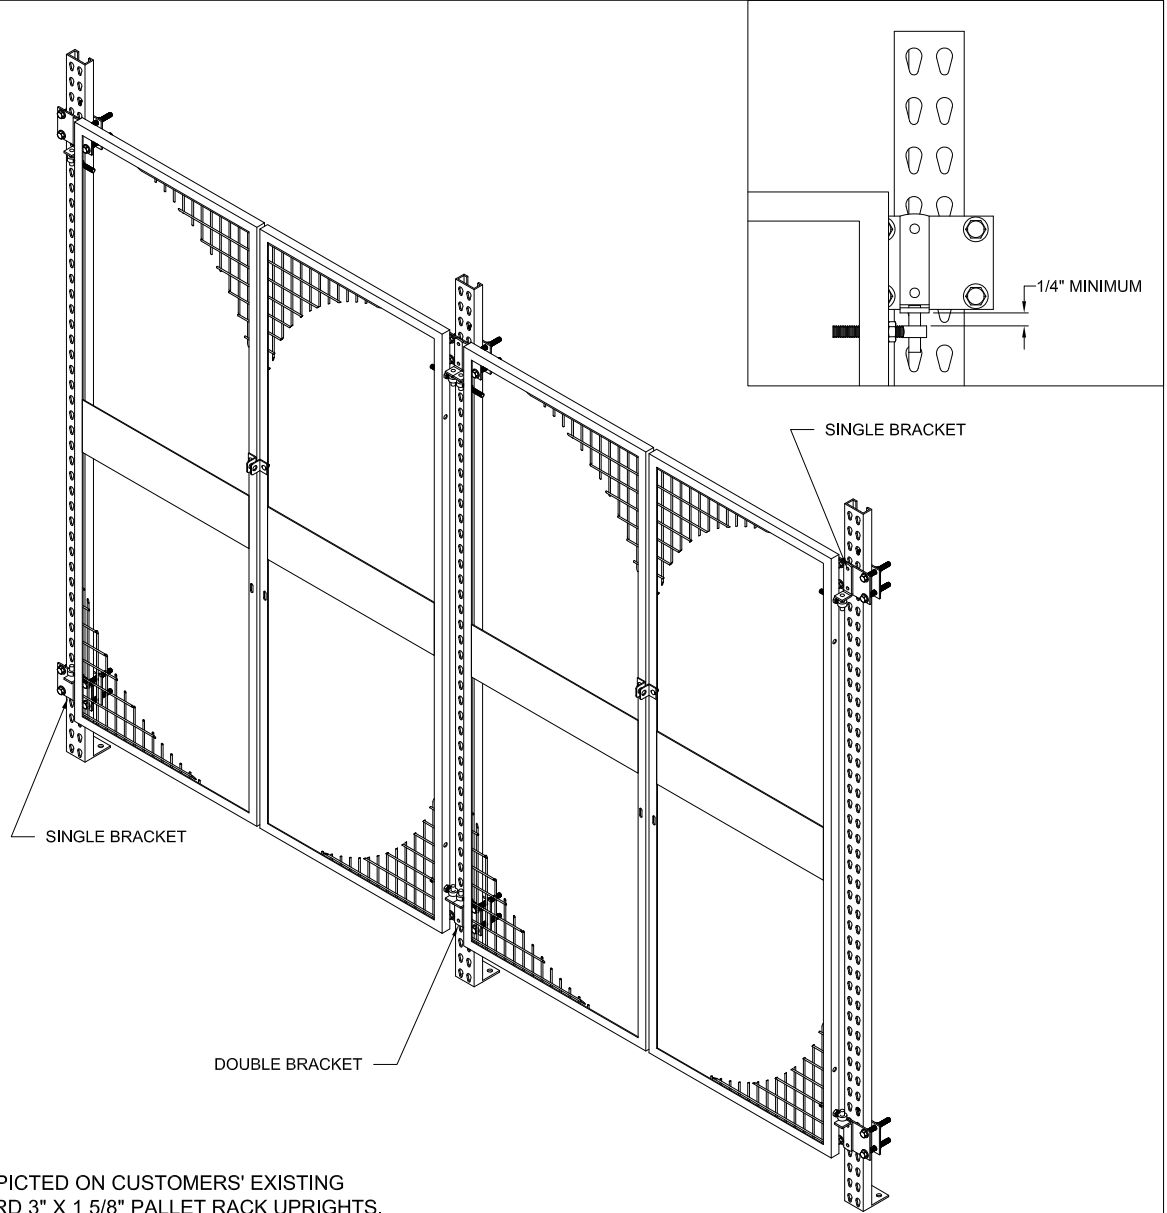

* INSTALLATION DEPICTED ON CUSTOMERS' EXISTING INDUSTRY STANDARD 3" X 1 5/8" PALLET RACK UPRIGHTS. REMAINDER OF RACK NOT SHOWN FOR CLARITY.


INSTALLATION

1. DECIDE WHICH DOOR MOUNTING HOLES TO USE BY MEASURING YOUR DESIRED SWEEP SPACE AND AVOIDING HORIZONTAL RACK BEAMS.
2. MOUNT BOTTOM BRACKET A MINIMUM OF 1 3/4" ABOVE FINISHED FLOOR.
3. SET DOOR IN BOTTOM BRACKET. (USE SPACER BLOCK IF AVAILABLE)
4. INSTALL TOP BRACKET LEAVING A MINIMUM OF 1/4" OF PINTLE ROD SHOWING BETWEEN ROD END FACE AND PINTLE BRACKET. (SEE DETAIL INSET ABOVE)
5. INSTALL PADLOCK HASPS LOOSELY UNTIL FINAL DOOR ADJUSTMENT IS MADE.
6. ADJUST GAP BETWEEN DOORS BY ADJUSTING ROD END NUTS IN OR OUT.
7. TIGHTEN PADLOCK HASP HARDWARE.


TIPS & TRICKS

1. SET SPACER BLOCK OF DESIRED SWEEP SPACE BELOW DOOR TO SET BRACKET HEIGHTS.
2. EACH DOOR HALF MOUNTED ON OUTER RACK UPRIGHTS WILL REQUIRE (1) LEFT AND (1) RIGHT BRACKET.
3. ONE PAIR OF PADLOCK HASPS ARE PROVIDED. (CUSTOMER MAY PURCHASE AN ADDITIONAL PAIR FOR ADDED SECURITY)


SINGLE BRACKET

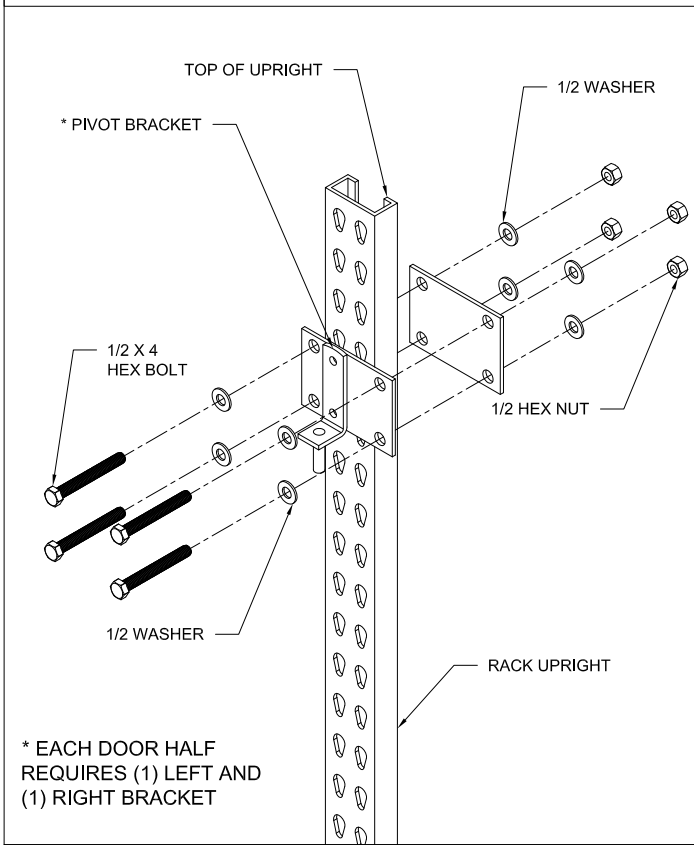

DOUBLE BRACKET

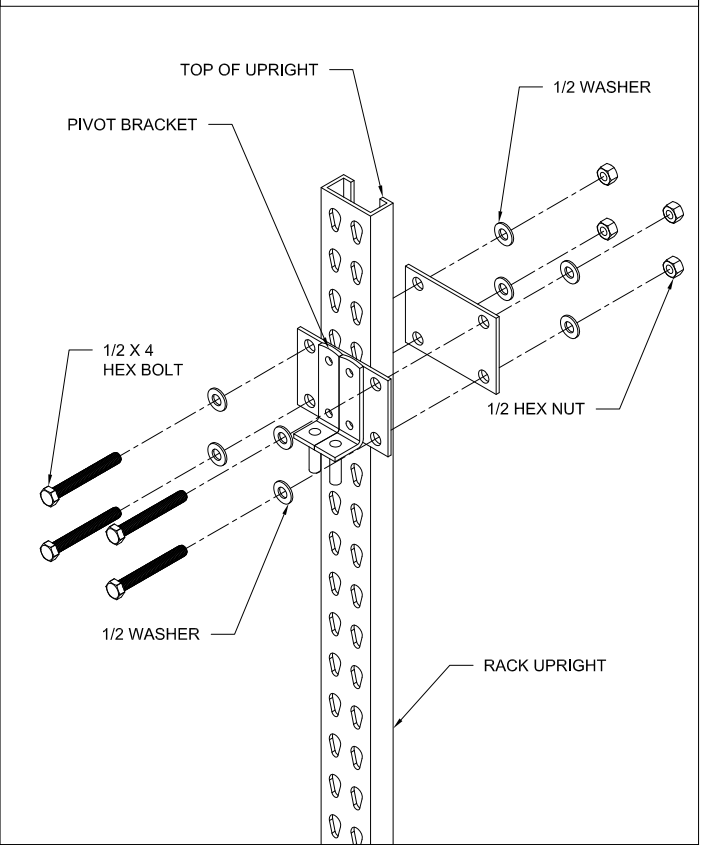

ROD END

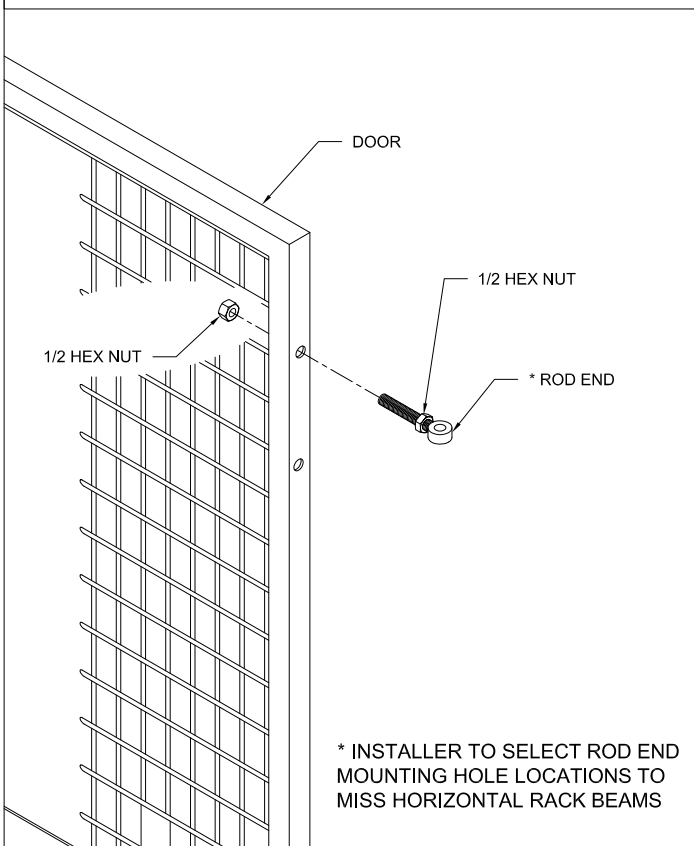

PADLOCK HASP

